


DIGIFIZmini wiring diagrams Outside Air Temperature

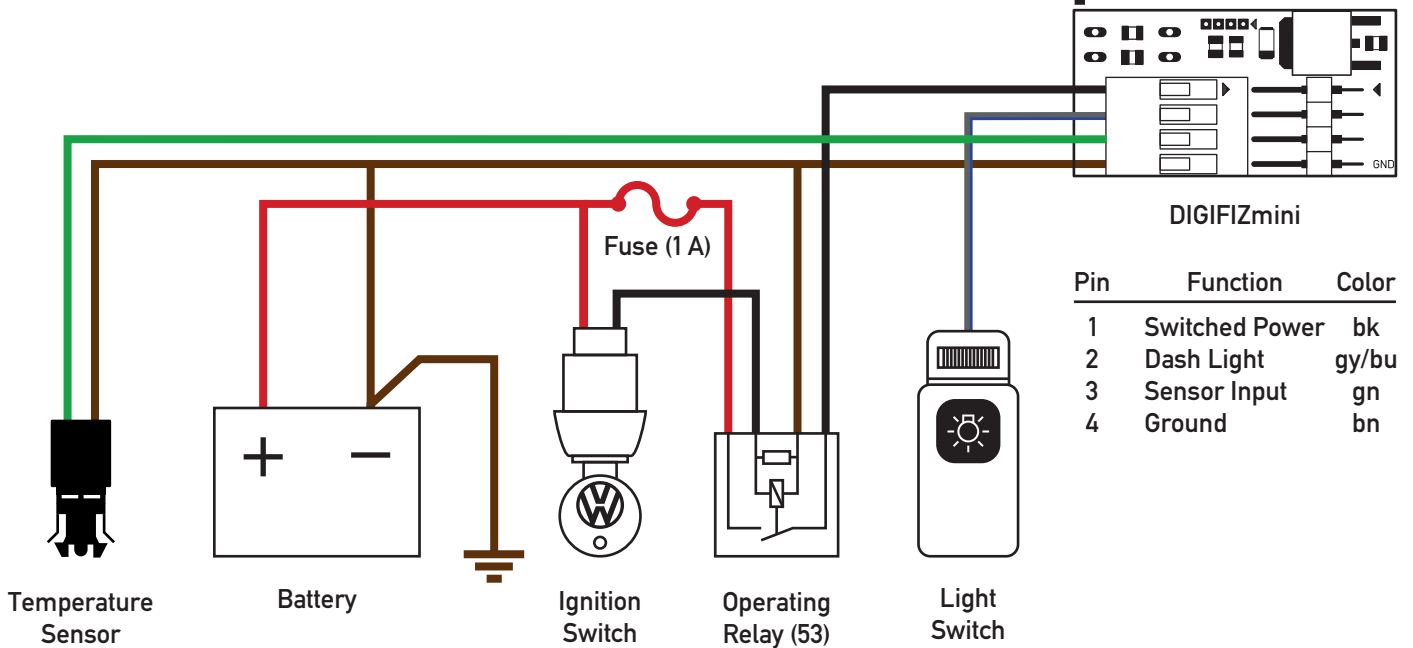

Installation Notes:

- DIGIFIZminis are not plug and play devices
- Installation should only be done by experienced personnel
- Disconnect the battery before doing any work to vehicle electronics
- For best accuracy connect sensor ground as close to DIGIFIZmini as possible
- One relay and one fuse are enough for up to ten DIGIFIZminis
- Crimping wires should always be preferred to soldering
- Don't connect a DIGIFIZmini to a sensor which is also used by something else
- Supported outside air temperature sensor: 1J0 919 379 A (BERU ST112)