


DIGIFIZmini Boost

wiring diagrams

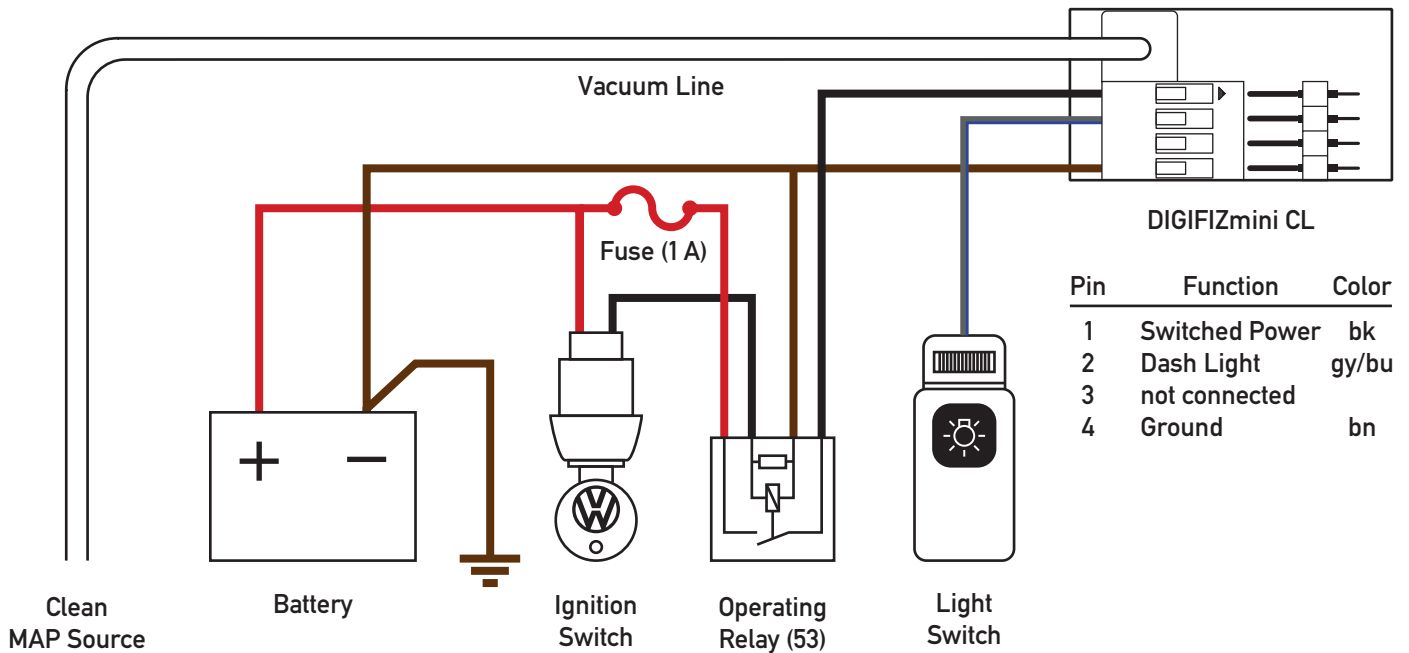

Installation Notes:

- Installation should only be done by experienced personnel
- Disconnect the battery before doing any work to vehicle electronics
- One relay and one fuse are enough for up to ten DIGIFIZminis
- Crimping wires should always be preferred to soldering
- A filter in the vacuum line going to the DIGIFIZmini is recommended
- The DIGIFIZmini CL boost gauge is calibrated to an atmospheric pressure of ~1 bar. Therefore the gauge will show wrong values, if operated at very high altitudes.